


POWERLINK UPDATER SETUP

After downloading «PowerLink_installer_datexxxxxx.exe»

Double click to on the file to extract installations files to the desire folder.


By default, a subfolder «PowerLink package installer_datexxxxxx_win 32 et 64bit» will be create where the download file was saved. But you can choose an other path by clicking on «Browse...»

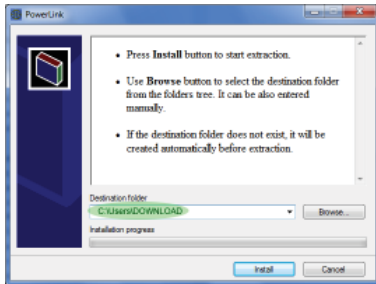

Go to the «PowerLink package installer_datexxxxxx_win 32 et 64bit» folder.


Right click on the file «PackageInstaller win32 and 64 bits.exe» and choose «Run as administrator».

Installation of NetCommOCX will start.

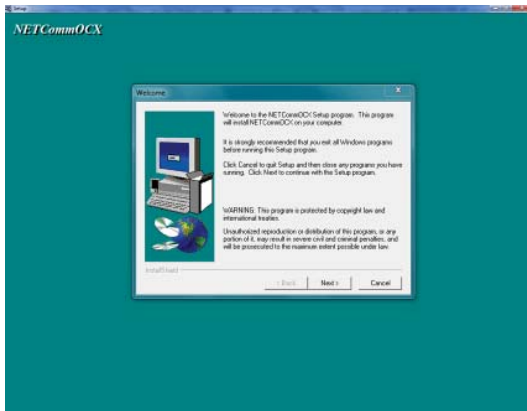


Let all answers by default and Click «Next» for all of windows...

At the end of the first step the following message will appear.

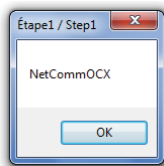


Clik «OK» to continue.


Installation of «PowerLink» will start.

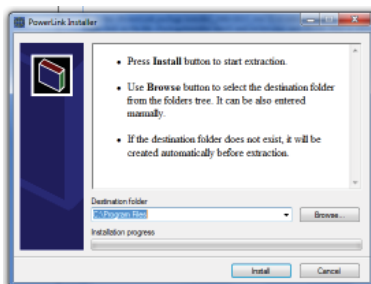


Leave the installation path by default to C:\Program Files.
Click on «Install» to continue.

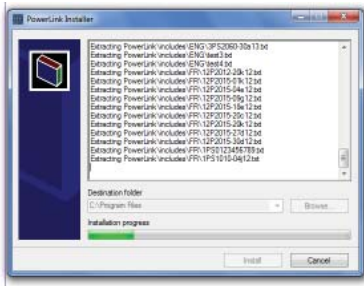

At the end of the second step this message will appear.

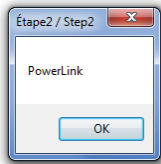

Click «OK» to continue.

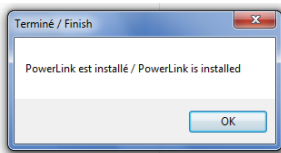

Installation of «PowerLink» is done.

Plug in the PowerLink USB cable.

Windows will detect the cable and install the driver automatically.

If windows cannot find the drivers, you have to download and install manually the driver.

Go to <http://www.ftdichip.com/Drivers/VCP.htm> to find the latest version.